



# Single Motor Standing Desk Installation Manual

UL1-02

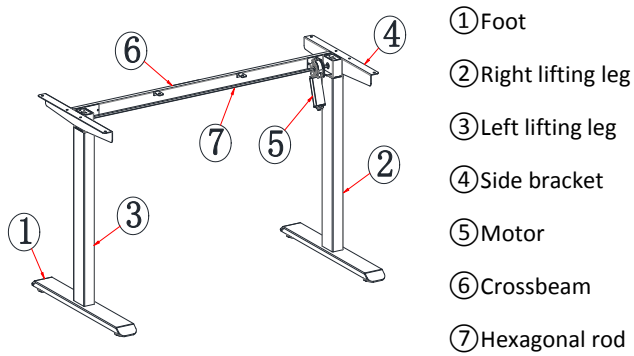


## Step 1

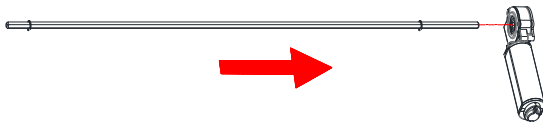


As picture show: Pass the Hexagonal rod (part 7) through hexagonal hole of the Motor (part 5).

## Step 2

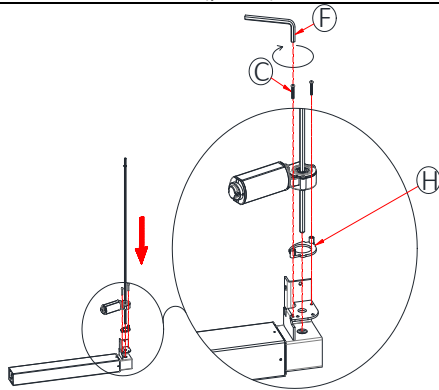


Insert the Hexagonal rod assembled in Step 1 into the hexagonal hole of the Right lifting leg (part 2) through the Motor Gasket (part H), and tighten it with (part C) Screw M5x30.

## Step 3

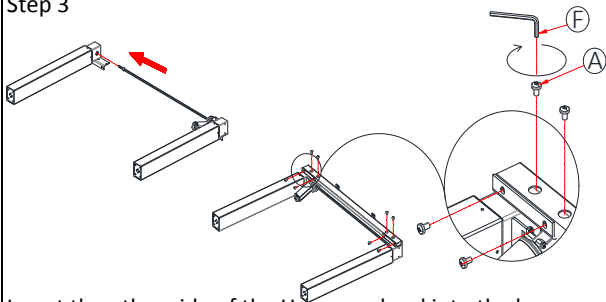

Insert the other side of the Hexagonal rod into the hexagonal hole of the Left lifting leg (part 3), and attach the Crossbeam (part 6) to the Lifting leg (part 2 and 3) using (part A) Screw M6x10.


## Step 4

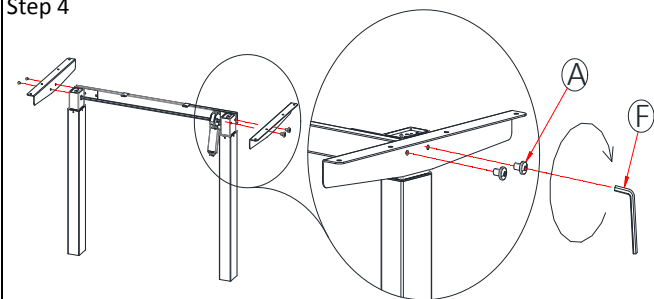

Attach Side bracket (part 4) to the Crossbeam (part 6) using (part A) Screw M6x10.


Parts Included			Qty
A	Screw M6x10		12
B	Screw M6x16		8
C	Screw M5x30		2
D	Wood screw ST4.8x16		10
E	Wood screw ST4.2x16		2
F	Allen wrench 4mm		1
G	Cable clip		5
H	Motor Gasket		1
I	Handset		1
J	Power cable		1
K	Dowel		6

## Step 5

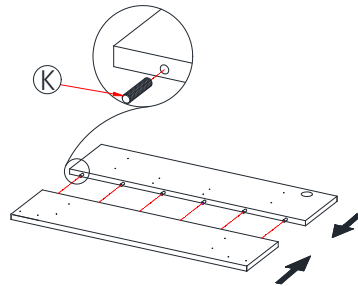


Connect the two desktop using Dowel (part K).

## Step 6

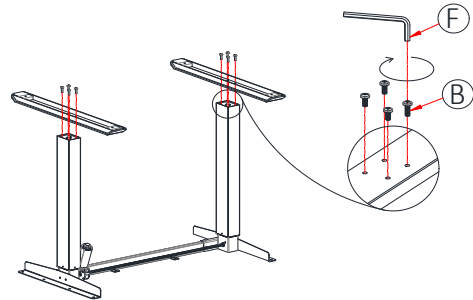


Attach Foot (part 1) to the Lifting leg (part 2 and 3) using (part B) Screw M6x16.

## Step 7

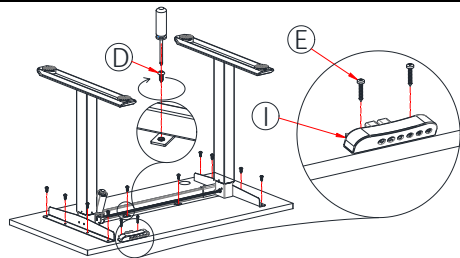


Adjust Crossbeams to proper position to fit the desktop. Tighten the (part D) Wood screw ST4.8x16 to lock. Attach the Handset (part I) to the underside of the desktop using (part E) Wood screw ST4.2x16.

## Step 8

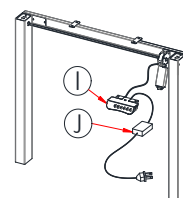

Connect the Motor cable (part J) and Power cable (part I) to the Handset (part I).

# Instructions For Use

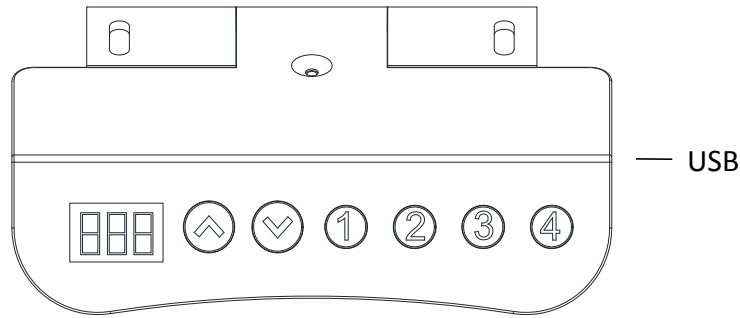

## IMPORTANT: You must reset the desk prior to use.

### Reset Procedure:

1. Press and hold the DOWN button on the handset until the desk reaches its lowest height.
  2. Release the DOWN button.
  3. Press and hold the DOWN button about 5 seconds until the handset display reads "RST", the desk slightly rises 5mm and stops.
  4. Release the DOWN button. The desk is now ready for use.
- Note: When the LED display shows an error code, the desk must be RESET prior to use.

### Adjust desk height

Press the UP or DOWN button to adjust the height of the desk.

### Memory setting

1. Press the UP or DOWN button to move the desk to the desired height.
2. Press and hold the "1, 2, 3, or 4" button about 2 seconds until the LED display "S-".

### Lock the handset:

1. Press and hold the "4" and "2" buttons for about 5 seconds until the sound "di".
2. LED will show LOC.
3. Handset is now locked.

### Unlock the handset:

1. Press and hold the "4" and "2" buttons for about 5 seconds until the sound "di".
2. LED will show the height display.
3. Handset is now unlocked.

### Upper and Lower Height Limits:

#### Set the UPPER Limit:

1. The handset display height > 92.5mm.
2. Press and hold the UP and DOWN buttons for about 5 seconds until the handset sounds "di."
3. The desk upper limit height setting is successful.

#### Set the LOWER Limit:

1. The handset display height < 92.5mm.
2. Press and hold the UP and DOWN buttons for about 5 seconds until the handset sounds "di."
3. The desk lower limit height setting is successful.

#### Removing the Upper or Lower Position:

1. Press the "UP" and "DOWN" button together for about 5 seconds until the sounds "di".
2. The upper or lower limits are now removed.

### Changing the anti-collision sensitivity:

1. Press and hold buttons "3" and "4" until the sounds "di", handset display show number 0, 1, 2, 3, 4, 5, 6, 7, or 8.
  - 0 = Close the anti-collision function
  - 1, 2, 3 = Least sensitive
  - 4, 5, 6 = Middle sensitive
  - 7, 8 = Most sensitive
2. Press the "UP" or "DOWN" button to switch the number Middle (#4, 5, 6) or Least sensitive (#1, 2, 3).
3. Press and hold the "UP" and "4" buttons until sounds "di", the desk is now ready to use.

### Changing from inches to centimeters: (CN is centimeters. IH is inches).

Press and hold the "4" and "1" buttons (about 5 seconds), until the LED switches to "CN", and "IH".

## TROUBLESHOOTING:

Error code	Error cause	Measure
E05	Anti-collision issue	Please change the anti-collision sensitivity, least or middle sensitive the desk will be ready to
ERR	1. Handset disconnected 2. Lifting legs disconnected 3. Leg or handset faulty	Ensure that the lifting leg connection to the hexagonal rod, and that all cables are connected to the handset. Execute <b>RESET</b> . (Abnormal sound of the lifting leg, please replace the leg)

If the error cannot be corrected through the described measure:

Unplug the power plug.

Wait approx. 5 minutes

Execute RESET.

If an error still occurs after these steps have been executed. Please contact your sales rep.