


Instructions For Use

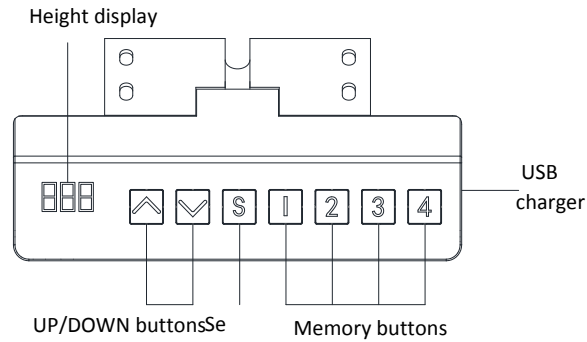

IMPORTANT: You must reset the lifting column prior to use.

Reset Procedure:

1. Press and hold the DOWN button on the handset until the column reaches its lowest height.
2. Release the DOWN button.
3. Press and hold the DOWN button for about 5 seconds until LED sounds "di". The desk will be ready to use.

Adjust desk height:

Press UP or DOWN button to adjust the lifting leg.

Memory setting:

1. Press the UP or DOWN button to move the column to the desired height.
2. Press the "S" button until the LED flashes.
3. Press the number "1, 2, 3, or 4" you want the column set to.

LOCKING OR UN-LOCKING THE HANDSET.

To Lock:

1. Press and hold the "S" and "2" buttons for about 5 seconds until the sound "di".
2. LED will show LOC.
3. Release the button.
4. Handset is now locked.

To Unlock: (Removing LOC on the handset)

1. Press and hold the "S" and "2" buttons for about 5 seconds until the sound "di".
2. LED will show the height display.
3. Release the button.
4. Handset is now unlocked.

Reminder function (H means Hour)

1. Press the "S" and "1" buttons until LED shows the "0.0H".
2. Press the UP or DOWN buttons to adjust the reminder time "0.5H", "1.0H", "1.5H"...
3. Release the button. 2 minutes later Reminder function is now set. Removing the reminder function, adjust the time "0.0H".

CHANGING FROM INCHES TO CENTIMETERS:

(CN is centimeters. IH is inches)

Press and hold the "S" and "3" buttons 5 seconds switches to "CN", "IH".

SETTING THE UPPER AND LOWER LIMITS:

The column can adjust the upper and lower travel limit.

Set the UPPER or LOWER Limit:

1. Use the UP/DOWN buttons to move the column to the desired height.
2. Press the "UP" and "DOWN" button for about 5 seconds until sounds "di".
3. The new upper or lower limit is now set.

Removing the Upper or Lower Position:

1. Press the "UP" and "DOWN" button together for about 5 seconds until the sounds "di".
2. The upper or lower limits are now removed.

NOTE II: Reset the Memory positions if they are outside the new range.

NOTE III: If you attempt to revise a previously set upper or lower limit, and it is outside of the existing range, you will need to remove the previously set upper/lower limit first.

TROUBLESHOOTING:

The first step to reconnecting all wires and power code is to make sure the wires are solidly connected. Then RESET THE BASE:

Error code	Error cause	Measure
OL	Overload	Removing the weight.
E05	Anti-collision	Fixed controller and handset.
HOT	Overheat	Allow the desk to cool down for 5-18 minutes.
Er1	Lifting leg 1 not connected	Check lifting leg cable connection to the controller and execute RESET .
Er2	Lifting leg 2 not connected	Check lifting leg cable connection to the controller and execute RESET .

If the error cannot be corrected through the described measure:

Unplug the power plug.

Wait approx. 5 minutes

Execute **RESET**.

If an error still occurs after these steps have been executed. Please contact your sales rep.